

G-1000/EM-2000 General Menu Structure

Menu Name	Next level menu entries / Comments				
	F1	F2	F3	F4	F5
MASTER	Mixer	Param	Midi	UsrSt	Disk
MIXER	RTime	Arrng	Song	Effct	Exit
PARAM	Glbal	Tune	Cntrl	Name	Exit
MIDI	Rtime	Arrng	Song	NTA	Exit
(shift)	Basic	Style	Param	Sync	Exit
USRSTL	Rec	Lengt	TSign	Edit	Exit
(shift)	Copy	Micro	Name	Utlty	Exit
DISK	Load	Save	Rname	Dlete	Exit
(shift)	CstSt	SngSt	Utlty	Dvice	Exit
TONE	(called directly by the "TONE" button)				
	Bank	Numb	Var	Edit	Exit
(shift)	Arrng	(this second page of the TONE menu is titled "SOURCE".)			
VOLUME	(called by the Volume button or by turning any knob when in Master)				
	Glbal	Upper	Lower	Bs&Dr	Exit
ARRCHR	(called directly by the ARRCHR button. Here F1-F4 are actual commands)				
	Left	Right	Whole	Off	Exit
DSKLST	(called directly by the DISK LIST button)				
	Style	Song	SngSt	Dvice	Exit
(shift)	Rname	Dlete	NotelInput	Dvice	Exit
	(this second page of the DSKLST menu is titled "EDIT")				